


Underground Residential Fiber Service with Flower Pot (FP) Style Box

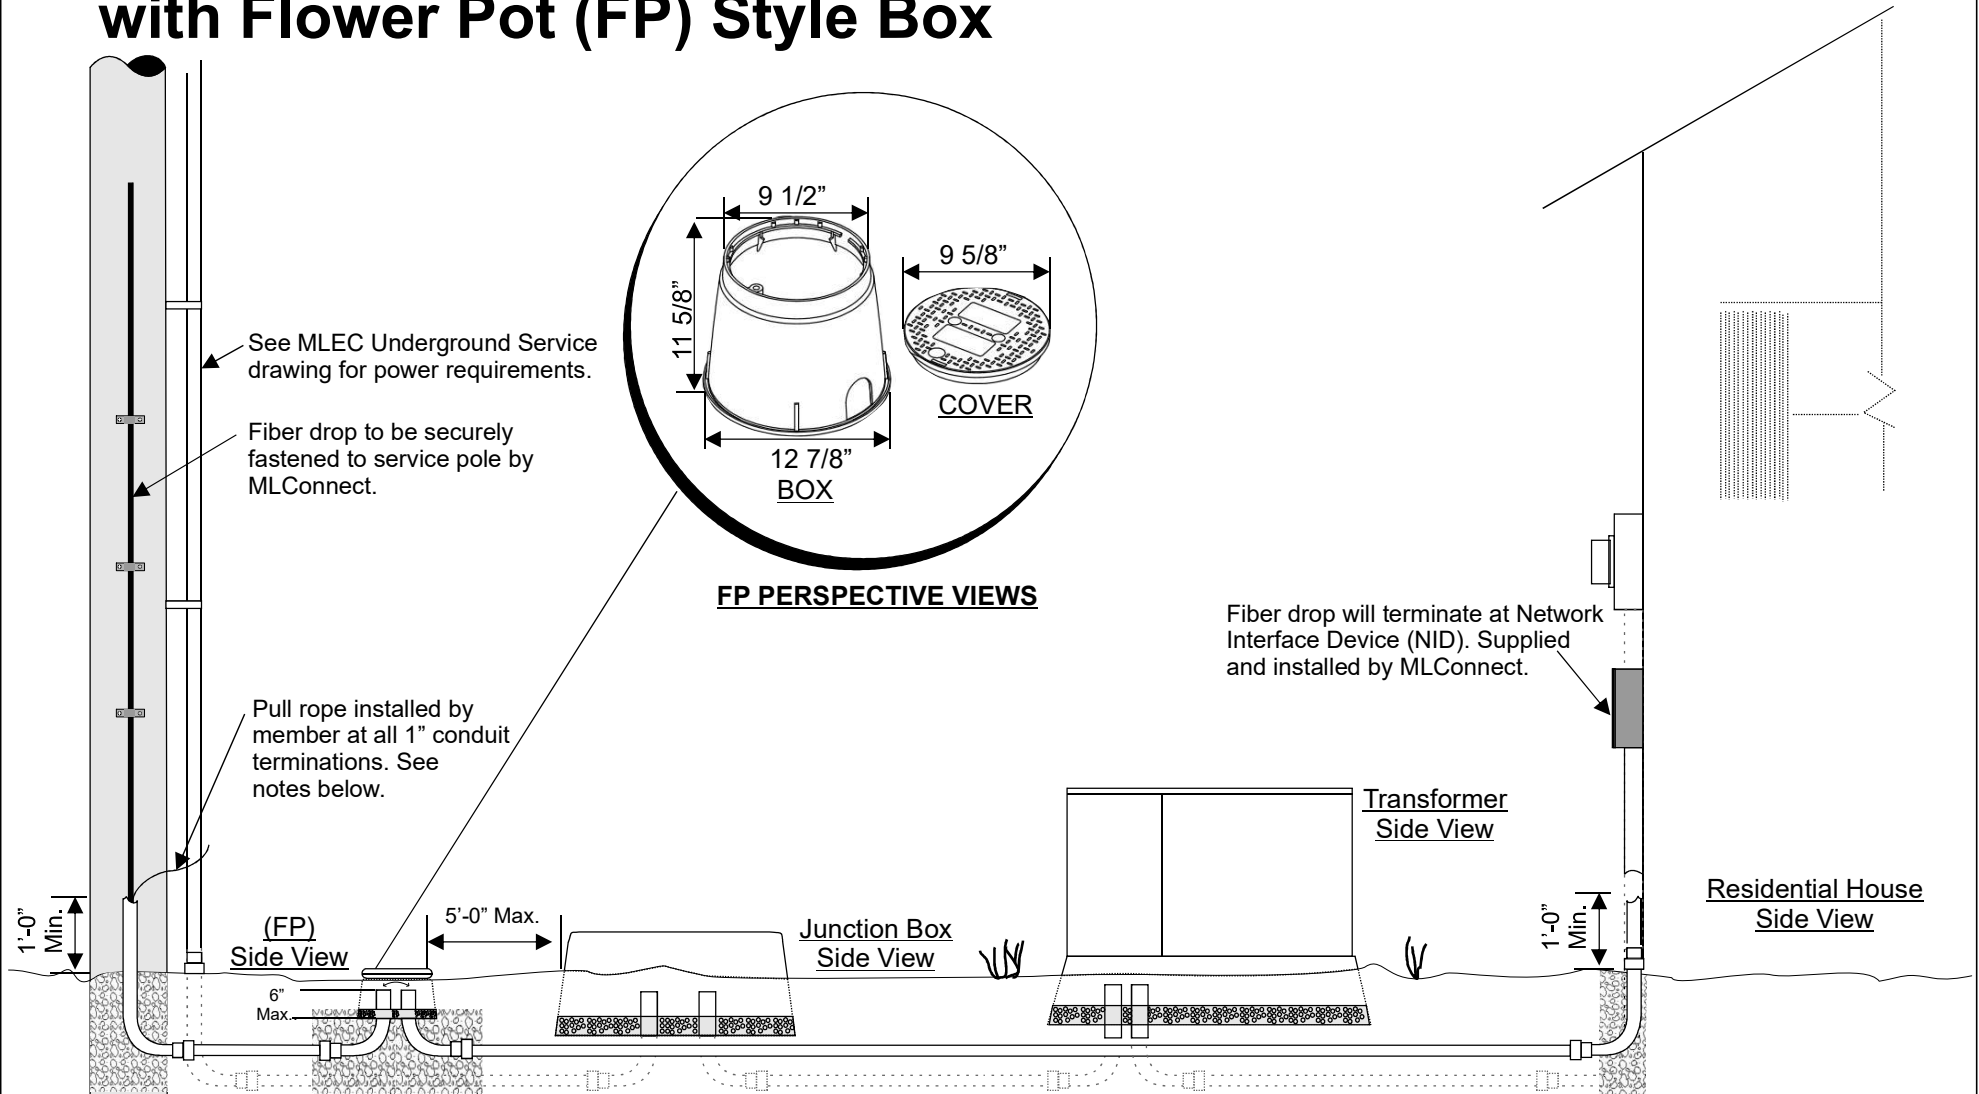

Items below shall be installed by member

1. Customer to install a flower plot (FP) either upstream or downstream of power junction box. Available from MLEC offices.
2. Flower pot (FP) must be installed a maximum of 5'-0" away from MLEC Junction Box and the top of the "pot" should be even with ground level or maximum 1" above final grade.
3. A 1/4" nylon rope or mule tape must be present inside all installed conduit with at least 3'-0" extending out past end of conduit and securely taped at each end.
4. 1" conduit should extend upward a minimum of 1'-0" above grade using long sweeps at electric pole and house - no 90-degree plumbing elbows.
5. The 1" turn-up conduit sections should be 8" apart within FP.
6. Conduit may be buried in same ditch as power. If not in same ditch, conduit must be buried minimum 24" below final grade.

Note: Fiber drop can be pulled up to 1,000 feet through 1" conduit.

File: **URD Fiber Flower Pot Install**
 Rev. By: Engineering
 Date: 02/17/21 - Last Rev.: 02/26/21 EAD